Dometic

User manual

Washing Machine

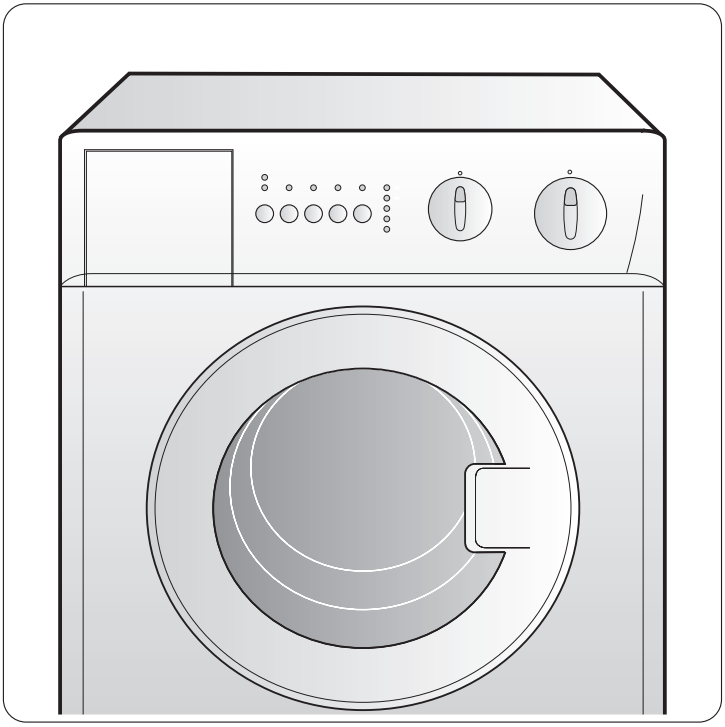

WMD 1050

Contents

Safety information	2	Care and cleaning	12
Product description	3	What to do if…	13
Control panel	5	Technical data	15
Before first use	7	Consumption values	16
Daily use	7	Installation	16
Helpful hints and tips	9	Environment concerns	19
Washing programmes	11	Warranty	20

Subject to change without notice

⚠ Safety information

Important! Read carefully & keep for future reference.

- The safety of Your appliance complies with the industry standards and with legal requirements on the safety of appliances. However, as manufacturers, we feel it is our duty to provide the following safety notes.
- It is most important that this instruction book should be retained with the appliance for future reference. Should the appliance be sold or transferred to another owner, or should you move house and leave the appliance, always ensure that the book is supplied with the appliance in order that the new owner can get to know the functioning of the appliance and the relevant warnings.
- You MUST read them carefully before installing or using the appliance.
- Before first starting up, check the appliance for any damage incurred during transport. Never connect up a damaged appliance . If parts are damaged, contact your supplier.
- If the appliance is delivered in the winter months when there are minus temperatures. Store it at room temperature for 24 hours before using for the first time.

General safety

- It is dangerous to alter the specifications or attempt to modify this product in any way.
- During high temperature wash programmes the door glass may get hot. Do not touch it!
- Make sure that small pets and children do not climb into the drum. To avoid this, please check into the drum before using.
- Any objects such as coins, safety pins, nails, screws, stones or any other hard, sharp material can cause extensive damage and must not be placed into the machine.
- Only use the advised quantities of fabric softener and detergent. Damage to the fabric can ensue if you over-fill. Refer to the manufacturer's recommendations of quantities.
- Wash small items such as socks, laces, washable belts etc in a washing bag or pillow case as it is possible for such items to slip down between the tub and the inner drum.
- Do not use your washing machine to wash articles with whalebones, material without hems or torn material.
- Always unplug the appliance and turn off the water supply after use, cleaning and maintenance.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced people may cause injury or serious malfunctioning. Contact your local Service Centre. Always insist on genuine spare parts.

Installation

- This appliance is heavy. Care should be taken when moving it.
- When unpacking the appliance, check that it is not damaged. If in doubt, do not use it and contact the Service Centre.
- All packing and transit bolts must be removed before use. Serious damage can occur to the product and to property if this is not adhered to. See relevant section in the user manual.
- After having installed the appliance, check that it is not standing on the inlet

and drain hose and the worktop is not pressing the electrical supply cable against the wall.
- If the machine is situated on a carpeted floor, please adjust the feet in order to allow air to circulate freely under the appliance.
- Always be sure, that there is no water leakage from hoses and their connections after the installation.
- If the appliance is installed in a location subject to frost, please read the “dangers of freezing” chapter.
- Any plumbing work required to install this appliance should be carried out by a qualified plumber or competent person.
- Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.

Use

- This appliance is designed for domestic use. It must not be used for purposes other than those for which it was designed.
- Only wash fabrics which are designed to be machine washed. Follow the instructions on each garment label.
- Do not overload the appliance. See the Washing Programme Table.
- Before washing, ensure that all pockets are empty and buttons and zips are fastened. Avoid washing frayed or torn articles and treat stains such as paint, ink, rust, and grass before washing. Underwired bras must NOT be machine washed.
- Garments which have been in contact with volatile petroleum products should not be machine washed. If volatile cleaning fluids are used, care should be taken to ensure that the fluid is removed from the garment before placing in the machine.
- Never pull the power supply cable to remove the plug from the socket; always take hold of the plug itself.
- Never use the appliance if the power supply cable, the control panel, the working surface or the base are damaged so that the inside of the washing machine is accessible.

Child safety

- This appliance is not intended for use by person (including children) with reduced physical sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance
- The packaging components (e.g. plastic film, polystyrene) can be dangerous to children - danger of suffocation! Keep them out of children’s reach.
- Keep all detergents in a safe place out of children’s reach.
- Make sure that children or pets do not climb into the drum.

Product description

Your new appliance meets all modern requirements for effective treatment of laundry with low water, energy and detergent consumption. Its new washing system allows total use of detergent and reduces water consumption so saving energy.

Machine front

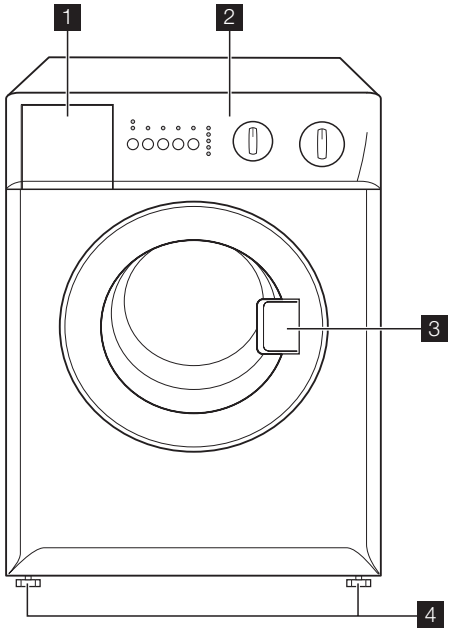

1 Detergent dispenser drawer
2 Control panel
3 Door opening handle
4 4 adjustable feet

Machine rear

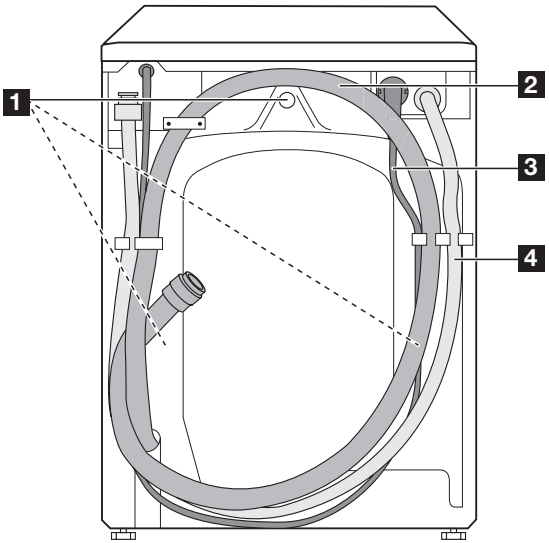

1 Transit locking devices
2 Drain hose
3 Electrical lead
4 Inlet hose

Detergent dispenser drawer

Compartment for powder or liquid detergent used for main wash. If using liquid detergent pour it **just before** starting the programme.
Compartment for liquid additives (fabric softener, starch).
Any fabric softener or starching additives must be poured into the compartment before starting the wash programme.

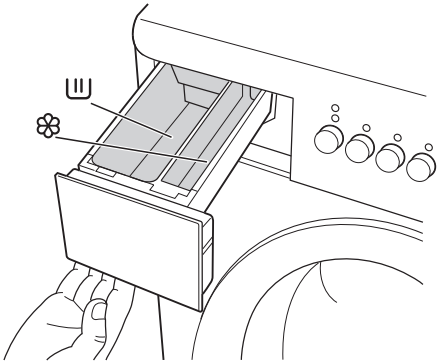

Prewash detergent is to be added straight into the drum.

Control panel

Henceforth, the programme selector dial, the spin selector dial, programme progress lights and different buttons will be indicated in all the book with the relevant numbers given below.

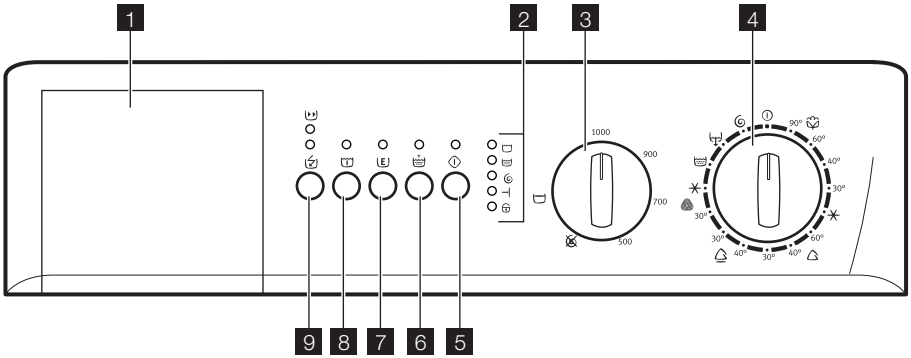

1 **Detergent drawer**
2 **OPTION button**
3 **PREWASH button**
4 **ECONOMY button**
5 **SUPER RINSE button**
6 **START/PAUSE button**
7 **Programme progress display**
8 **SPIN reduction selector**
9 **Programme selector dial**

Table of Symbols

= Extra Quick
= Quick
= Economy
= Super Rinse

= Prewash
= Washing
= Rinses
= Spin
= Rinse Hold
= No Spin
= Cotton
= Cold
= Synthetic

= Start/Pause
= Cycle End
= Door Locked

= Delicate
= Wool
= Drain
= ON/OFF

Extra Quick

Very short programme for lightly soiled laundry, except for wool. The washing time will be reduced approx. 30 minutes for cotton and by 20 minutes for synthetic. The machine will perform 1 rinse less.

Quick

By selecting this option the washing time will be reduced approx. 10 minutes. This option is recommended for lightly soiled white-/coloured and synthetic laundry.

Prewash

By selecting this option the machine performs a prewash cycle before the main wash phase. The washing time will be prolonged. This option is recommended for heavily soiled laundry.

Economy

Only for cottons and synthetic items lightly or normally soiled at a temperature of 40°C or higher. The washing time will be prolonged and the washing temperature will be reduced. You can use this option if you want to wash normally soiled laundry and at the same time save energy.

Super Rinse

This appliance is designed for saving energy. If it necessary to rinse the laundry using an extra quantity of water (super rinse), select this option. Some additional rinses will be performed. This option is recommended for people who are allergic to detergents, and in areas where the water is very soft.

Start Pause

This button allows you to start or to interrupt the selected programme.

Display

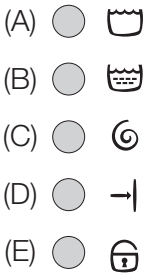

The light **A** illuminates when the machine is performing **the washing phase**.
The light **B** illuminates when the machine is **rinsing**.
The light **C** illuminates when the machine is **spinning**.
The light **D** illuminates at **the end** of the washing cycle.
The light **E** indicates if **the door** can be opened:

- The light is lit: the door cannot be opened.
- The light is out: the door can be opened.
- The light is flashing: the door can soon be opened.

Spin Reduction Dial

By turning the spin speed selector you can change the spin speed of the selected programme or to select «Rinse hold» or «No spin»option.

Programme Selector Dial
It allows you to switch the appliance on/off and/or to select a programme.

Before first use

Warning!

Ensure that the electrical and water connections comply with the installation instructions.

Important! Remove any material from the drum.

Important! We recommend you to run a wash programme without any load, to clear any residues which may have been left by the manufacturing process. Pour approx. 100 ml of detergent straight into the drum and run a cotton cycle at 60°C. When the programme is finished the machine will be ready to use.

Daily use

Load the laundry
Open the door by carefully pulling the door handle outwards. Place the laundry in the drum, one item at a time, shaking them out as much as possible. Close the door. Make sure that no laundry stays between the seal and the door. There is a risk of water leakage or damage to the laundry.

Measure out the detergent and the fabric softener
Pull out the dispenser drawer until it stops. Measure out the amount of detergent required, pour it into the larger compartment on the left .

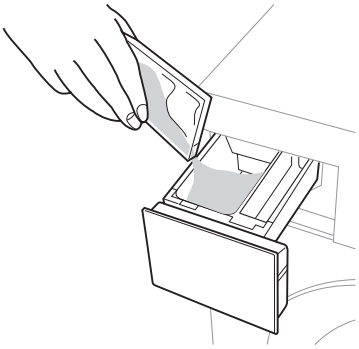

If required, pour fabric softener into the smaller compartment marked (the amount used must not exceed the «MAX» mark in the drawer). Close the drawer gently.

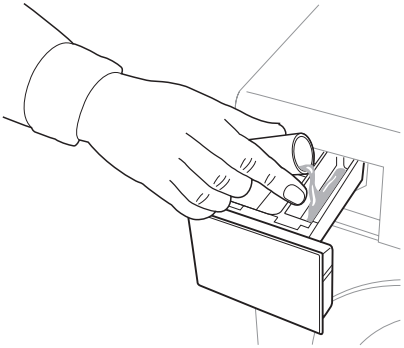

Select the required programme by means of the programme selector dial (9)

Turn the programme selector dial to the required programme. The selector can be turned either clockwise or anticlockwise.
The green light of button "Start" ◇ starts to flash.
On programme progress display the pilot lights corresponding to all phases composing the selected programme are lit.
On position ⏻ the programme is reset and the machine is switched OFF.
At the end of the programme the selector dial must be turned to position ⏻ to switch the machine off.

Important! If you turn the programme selector dial to another programme when the machine is working, the lights in the programme progress display will start to flash to indicate a wrong selection. The machine will not perform the new selected programme.

Select the spin speed, Rinse Hold or No spin option (8)

Select the spin speed, Rinse Hold option or No Spin option by turning the spin speed selector.

- The position 1000 is equivalent to 900 rpm for the synthetic and wool programmes and 700 rpm for the delicate wash programme.
- The position 500 is equivalent to 500 rpm for the synthetic and wool programmes and 450 rpm for the delicate wash programme.

Rinse hold
By selecting this option the water of the last rinse is not emptied out to prevent the fabrics from creasing. When the programme has finished, the lights "End" and "Door locked" are lit to indicate that the water must be emptied out (See: " At the end of the programme").

No spin
By selecting this option all the spinning phases are excluded. To be used for extremely delicate material. The machine will add some additional rinses to the cotton and synthetic programmes.

For the maximum spin speed allowed by each programme, refer to the chapter "Washing programmes".

Select the desired option by means of buttons 2, 3, 4 and 5

Depending on the programme, different functions can be combined. These must be selected after choosing the desired programme and before pressing the button "Start" ◇ . The relevant light will illuminate.

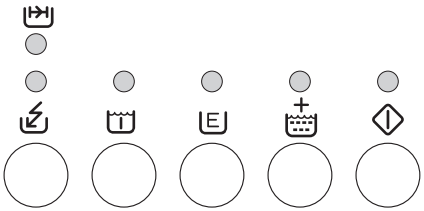

If an incorrect option is selected, the corresponding indicator lamp flashes for about 2 seconds. For the compatibility of the options with the washing programmes, refer to the chapter «Washing programmes».

Start the programme by pressing button 6

To start the selected programme, press this button; the corresponding pilot light stops flashing and remains lit.
On programme progress display the pilot lights "Washing" and "Door locked" illuminate to indicate that the appliance starts operating and the door is locked.

Altering an option or a running programme

It is possible to change any option before the programme carries it out.
Before you make any change, you must pause the washing machine by pressing the button **6**.
The programme can be changed as long as the button **6** has not been pressed. Changing a running programme is possible only by resetting it. Turn the programme selector dial to ⏻ and then to the new programme position. Start the new programme by pressing the button **6** again.

Interrupting a programme

Press the button **6** to interrupt a programme which is running, the correspond-

ing light starts to flash. Press the button again to restart the programme.

Cancelling a programme

Turn the selector dial to ⏻ position to cancel a programme which is running. Now you can select a new programme.

Opening the door after the programme has started

First set the machine to pause by pressing the button **6**.
After some minutes, the door can be opened, when the following conditions are observed:

- The water temperature is below 55°C.
- The water level is below the bottom edge of the door.
- The machine doesn't spin.

If you cannot open the door but it is absolutely necessary to open it you have to switch the machine off by turning the selector dial to ⏻ . After few minutes the door can be opened
(Pay attention to the water level and temperature!).
After this procedure, it will be necessary to set the programme and the options again and then press the button **6**.

At the end of the programme

The machine stops automatically.
The pilot light "End' →| illuminates to indicate that the programme has finished. The pilot light "Door locked" 🔒 goes out, the door can be opened and the laundry can be removed.
If at the end of a programme there is water in the tub (when "Rinse hold" option has been selected), **to empty out the water follow the following instructions**:

- turn the programme selector dial to ⏻
- select the «Drain» or «Spin» programme
- press button "Start" ⏀

When the pilot light "Door locked" 🔒 goes out, the door can be opened and the laundry can be removed.
At the end of the cycle, turn the programme selector dial to ⏻ to switch the machine off.
Remove the laundry from the drum and carefully check that the drum is empty. If you do not intend to carry out another wash, close the water tap.
Leave the door open to prevent the formation of mildew and unpleasant smells.

Helpful hints and tips

Sorting out the laundry

Follow the wash code symbols on each garment label and the manufacturer's washing instructions. Sort the laundry as follows: whites, coloureds, synthetics, delicates, woollens.

Temperatures

95° or 90°	for normally soiled white cottons and linen (e.g. tea cloths, towels, tablecloths, sheets...)
60°/50°	for normally soiled, colour fast garments (e.g. shirts, night dresses, pyjamas....) in linen, cotton or synthetic fibres and for lightly soiled white cotton (e.g. underwear)
40°-30°-Cold	for delicate items (e.g. net curtains), mixed laundry including synthetic fibres and woollens bearing the label «pure new wool, machine washable, non-shrink»

Before loading the laundry

Never wash whites and coloureds together. Whites may lose their «whiteness» in the wash.
New coloured items may run in the first wash; they should therefore be washed separately the first time.
Make sure that no metal objects are left in the laundry (e.g. hair clips, safety pins, pins).
Button up pillowcases, close zip fasteners, hooks and poppers. Tie any belts or long tapes.
Remove persistent stains before washing.

Rub particularly soiled areas with a special detergent or detergent paste.
Treat curtains with special care. Remove hooks or tie them up in a bag or net.

Maximum loads

Recommended loads are indicated in the washing programme charts.
General rules:

- **Cotton, linen:** drum full but not too tightly packed;
- **Synthetics:** drum no more than half full;
- **Delicate fabrics** and **woollens:** drum no more than one third full.

Washing a maximum load makes the most efficient use of water and energy.
For heavily soiled laundry, reduce the load size.

Laundry weights

The following weights are indicative:

The following weights are indicative:	
bathrobe	1200 g
quilt cover	700 g
man's work shirt	600 g
sheet, man's pyjamas	500 g
tablecloth	250 g
pillow case, towelling towel, night dress, man's shirt	200 g
tea cloth, ladies' briefs, napkin, blouse, men's underpants	100 g

Removing stains

Stubborn stains may not be removed by just water and detergent. It is therefore advisable to treat them prior to washing.
Blood: treat fresh stains with cold water. For dried stains, soak overnight in water with a special detergent then rub in the soap and water.
Oil based paint: moisten with benzine stain remover, lay the garment on a soft cloth and dab the stain; treat several times.
Dried grease stains: moisten with turpentine, lay the garment on a soft surface and dab the stain with the fingertips and a cotton cloth.
Rust: oxalic acid dissolved in hot water or a rust removing product used cold. Be careful with rust stains which are not recent since the cellulose structure will already have been damaged and the fabric tends to hole.
Mould stains: treat with bleach, rinse well (whites and fast coloureds only).
Grass: soap lightly and treat with bleach (whites and fast coloureds only).
Ball point pen and glue: moisten with acetone[1)], lay the garment on a soft cloth and dab the stain.
Lipstick: moisten with acetone as above, then treat stains with methylated spirits. Treat any residual marks with bleach.
Red wine: soak in water and detergent, rinse and treat with acetic or citric acid, then rinse. Treat any residual marks with bleach.
Ink: depending on the type of ink, moisten the fabric first with acetone[1)], then with acetic acid; treat any residual marks on white fabrics with bleach and then rinse thoroughly.
Tar stains: first treat with stain remover, methylated spirits or benzine, then rub with detergent paste.

Detergents and additives

Good washing results also depend on the choice of detergent and use of the correct quantities to avoid waste and protect the environment.
Although biodegradable, detergents contain substances which, in large quantities, can upset the delicate balance of nature.
The choice of detergent will depend on the type of fabric (delicates, woollens, cottons, etc.), the colour, washing temperature and degree of soiling.
All commonly available washing machine detergents may be used in this appliance:

- powder detergents for all types of fabric
- powder detergents for delicate fabrics (60°C max) and woollens
- liquid detergents, preferably for low temperature wash programmes (60°C max) for all types of fabric, or special for woollens only.

The detergent and any additives must be placed in the appropriate compartments of the dispenser drawer before starting the wash programme.

ⓘ Prewash detergent is to be added straight into the drum

1) do not use acetone on artificial silk

If using liquid detergents, a programme **without** prewash must be selected. Pour the liquid detergent into the detergent compartment immediately before you start the programme.
Your appliance incorporates a recirculation system which allows an optimal use of the concentrated detergent.
Follow the product manufacturer's recommendations on quantities to use and do **not exceed the «MAX» mark in the detergent dispenser drawer**.

Degrees of water hardness

Water hardness is classified in so-called "degrees" of hardness. Information on hardness of the water in your area can be obtained from the relevant water supply company, or from your local authority. If the water hardness degree is medium or high we suggest you to add a water softener following always the manufacturer's instructions. When the degree of hardness is soft, readjust the quantity of the detergent.

Washing programmes

Programme/ Temperature	Type of laundry	Options	Description of the programme
COTTON 90°	**White cotton** (heavily and normally soiled cotton items)	SPIN REDUCTION/ RINSE HOLD - EXTRA QUICK/QUICK [1]-PREWASH - ECONOMY - SUPER RINSE	Main wash Rinses Long spin max. 1000 rpm Max load 3 kg
COTTON 60° - COLD	**Coloured cotton** (normally soiled cotton items)	SPIN REDUCTION/ RINSE HOLD - EXTRA QUICK/QUICK [1]-PREWASH - ECONOMY[2] -SUPER RINSE	Main wash Rinses Long spin max. 1000 rpm Max load 3 kg
SYNTHETIC 60°-30°	**Synthetic or mixed fabrics** heavily and normally soiled items: underwear, coloured garments, non-shrink shirts, blouses.	SPIN REDUCTION/ RINSE HOLD - EXTRA QUICK/QUICK [1]-PREWASH - ECONOMY[3] - SUPER RINSE	Main wash Rinses Short spin max. 1,5 rpm Max Load 1,5 kg
DELICATE 40°-30°	**Delicate fabrics:** acrylics, viscose, polyester.	SPIN REDUCTION/ RINSE HOLD - EXTRA QUICK [1]-PREWASH - SUPER RINSE	Main wash Rinses Short spin max. 1,5 rpm Max Load 1,5 kg
WOOL 30°-COLD	Washing programme for machine washable wool as well as for hand washable woollens and delicate fabrics.	SPIN REDUCTION/ RINSE HOLD	Main wash Rinses Short spin max. 900 rpm Max Load 1 kg
RINSES	With this programme it is possible to rinse and spin cotton garments which have been washed by hand. The machine performs 3 rinses, followed by a final long spin. The spin speed can be reduced.	SPIN REDUCTION/ RINSE HOLD - SUPER RINSE	Rinses Spin max. 1000 rpm Max Load 3 kg

Programme/ Temperature	Type of laundry	Options	Description of the programme
DRAIN	For emptying out the water of the last rinse in programmes with the Rinse Hold or No spin option selected.		Draining of water Max Load 3 kg
SPIN	Separate spin for hand washed garments and after programmes with the Rinse Hold option selected. You can choose the spin speed by turning the spin speed selector to adapt it to the fabrics to be spun.	SPIN REDUCTION	Drain and long spin Max. spin speed 1000 rpm Max Load 3 kg
/**OFF**	For resetting the programme or switching the machine off		

1) If you select this option, we recommend that you reduce the maximum load. Recommended load for cotton is 2 kg.
This option cannot be selected together with Economy option.
2) Available at the temperature 60° and 40°.
3) Available at the temperature 60°.

Care and cleaning

Important! You must DISCONNECT the appliance from the electricity supply, before you can carry out any cleaning or maintenance work.

Descaling

The water we use normally contains lime. It is a good idea to periodically use a water softening powder in the machine. Do this separately from any laundry washing, and according to the softening powder manufacturer's instructions. This will help to prevent the formation of lime deposits.

Maintenance Wash

With the use of low temperature washes it is possible to get a build up of residues inside the drum.
We recommend that a maintenance wash be performed on a regular basis.
To run a maintenance wash:

- The drum should be empty of laundry.
- Select the hottest cotton wash programme.
- Use a normal measure of detergent, must be a powder with biological properties.

External cleaning

Clean the exterior cabinet of the appliance with soap and water only, and then dry thoroughly.

Cleaning the dispenser drawer

The washing powder and additive dispenser drawer should be cleaned regularly.

1. If necessary, the whole detergent drawer can be taken out of the machine for cleaning. You need to pull it firmly outwards, so that it comes free of retaining stop.

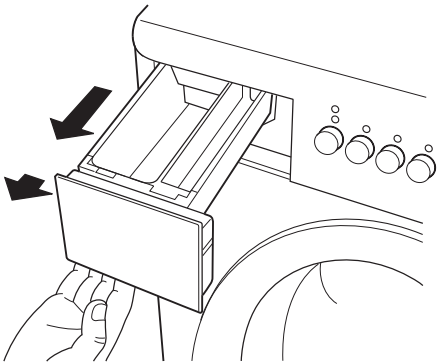

2. To remove the siphon at the inside edge of the drawer for cleaning, you need to press it inwards and pull it upwards at the same time. Flush it out under a tap, to remove any traces of accumulated powder. When you put it back, press it downwards until you hear a distinct click.

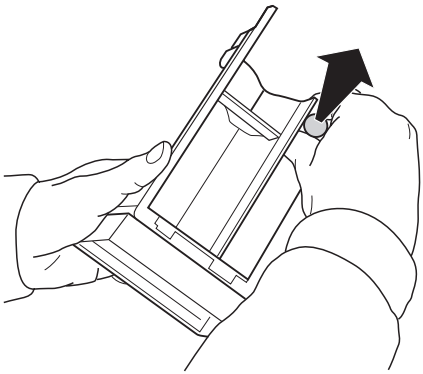

Cleaning the drawer recess

Having removed the drawer, use a small brush to clean the recess, ensuring that all washing powder residue is removed from the upper and lower part of the recess.

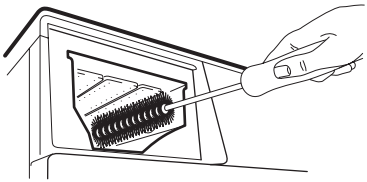

Replace the drawer and run the rinse programme without any clothes in the drum.

Cleaning the water inlet filter

If your water is very hard or contains traces of lime deposit, the water inlet filter may become clogged. It is therefore a good idea to clean it from time to time.

Turn off the water tap. Unscrew the water inlet hose. Clean the filter using a hard bristle brush. Tighten up the inlet hose.

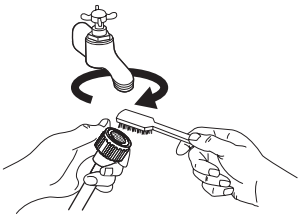

The dangers of freezing

If the machine is exposed to temperatures below 0°C, certain precautions should be taken.

- Turn off the water supply.
- Unscrew the inlet hose from the supply tap.
- Select a wash programme, start the machine and let the programme run for a short time.
- Interrupt the programme by turning the programme selector to ⏻ position.
- Place the end of inlet and drain hoses down low, into the waste gully (floor drain) set into the floor. Make sure that the end of the hose does not go below the water level in the gully's (drain's) water tap.
- Select the programme "Drain" and let it run until it is finished.
- Turn the programme selector to ⏻ position. When you intend to start the machine up again, make sure that the room temperature is above 0 °C.

The appliance is only to be used and stored indoors at normal room temperature. The manufacturer is not responsible for any frost damage.

What to do if…

Certain problems are due to lack of simple maintenance or oversights, which can be solved easily without calling out an engineer. Before contacting your local Service Centre, please carry out the checks listed below.

During machine operation it is possible that the **End** pilot light blinks to indicate that the machine is not working:

- **1 flash:** problem with the water supply.
- **2 flashes:** problem with the water draining.

• **4 flashes:** door open.
Once the problem has been eliminated, press the button START to restart the programme. If after all checks, the problem persists, contact your local Service Centre.

Problem	Possible cause/Solution
The machine does not start:	The door has not been closed. • Close the door firmly. The plug is not properly inserted in the power socket. • Insert the plug into the power socket. There is no power at the socket. • Please check your domestic electrical installation. The main fuse has blown. • Replace the fuse. The selector dial is not correctly positioned and the button Start has not been pressed. • Please turn the selector dial and press the button Start again.
The machine does not fill:	The water tap is closed. • Open the water tap. The inlet hose is squashed or kinked. • Check the inlet hose connection. The filter in the inlet hose is blocked. • Clean the water inlet hose filter. The door is not properly closed. • Close the door firmly.
The machine fills then empties immediately:	The end of the drain hose is too low. • Refer to relevant paragraph in «Installation» chapter.
The machine does not empty and/or does not spin:	The drain hose is squashed or kinked. • Check the drain hose connection. An option or a programme that ends with the water still in the tub or that eliminates all the spinning phases has been selected. • Select the draining or spinning programme. The laundry is not evenly distributed in the drum. • Redistribute the laundry.
There is water on the floor:	Too much detergent or unsuitable detergent (creates too much foam) has been used. • Reduce the detergent quantity or use another one. Check whether there are any leaks from one of the inlet hose fittings. It is not always easy to see this as the water runs down the hose; check to see if it is damp. • Check the water inlet hose connection. The drain or inlet hose is damaged. • Change it with a new one.
Unsatisfactory washing results:	Too little detergent or unsuitable detergent has been used. • Increase the detergent quantity or use another one. Stubborn stains have not been treated prior to washing. • Use commercial products to treat the stubborn stains. The correct temperature was not selected. • Check if you have selected the correct temperature. Excessive laundry load. • Reduce the laundry load.
The door will not open:	The programme is still running. • Wait the end of washing cycle. The door lock has not been released. • Wait until the indicator light for door locked has gone out. There is water in the drum. • Select drain or spin programme to empty out the water.

Problem	Possible cause/Solution
The machine vibrates is noisy:	The transit bolts and packing have not been removed. • Check the correct installation of the appliance. The support feet have not been adjusted • Check the correct levelling of the appliance. The laundry is not evenly distributed in the drum. • Redistribute the laundry. Maybe there is very little laundry in the drum. • Load more laundry.
Spinning starts late or the machine does not spin:	The electronic unbalance detection device has cut in because the laundry is not evenly distributed in the drum. The laundry is redistributed by reverse rotation of the drum. This may happen several times before the unbalance disappears and normal spinning can resume. If, after 10 minutes, the laundry is still not evenly distributed in the drum, the machine will not spin. In this case ,redistribute the load manually and select the spin programme. • Redistribute the laundry. The load is too small. • Add more items, redistribute the load manually and then select the spinning programme.
No water is visible in the drum:	Machines based on modern technology operate very economically using very little water without affecting performance.

If you are unable to identify or solve the problem, contact our service centre. Before telephoning, make a note of the model, serial number and purchase date of your machine: the Service Centre will require this information.

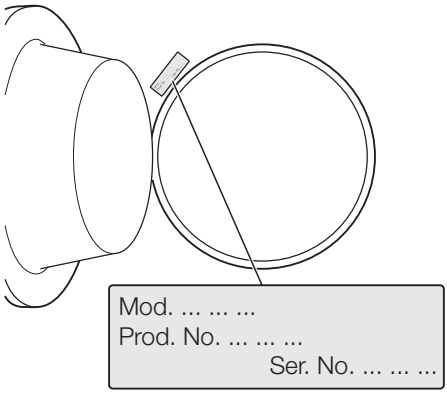

Technical data

Dimensions	Width / Height / Depth	500 / 670 / 550 mm
Electrical connection	Voltage Overall power Fuse Frequency	230-240 V 1600 W 10 A 50 Hz
Water supply pressure	Minimum Maximum	0,5 bar (0,05 MPa) 8 bar (0,8 MPa)
Level of protection against ingress of solid particles and moisture		IPX4
Water supply [1)]		Cold water
Maximum Load	Cotton	3 kg

Spin Speed	Maximum	1000 rpm

1) Connect the water inlet hose to a water tap with a 3/4'' thread.

Consumption values

Programme	Energy consumption (KWh)	Water consumption (litres)	Programme duration (Minutes)
White Cottons 90°	1.43	44	~ 126
Cottons 60°	0.78	44	~ 107
Cotton + **ECO** option 60° 1)	0.57	39	~ 130
Synthetic 60°	0.57	42	~ 82
Synthetic 40°	0.26	42	~ 67
Delicate 40°	0.38	45	~ 61
Wool 30°	0.20	45	~ 45
Rinses	0.03	27	~ 26
Drain	-	-	~ 1
Spin	-	-	~ 5

1) «Cottons + Eco option» at 60°C with a load of 3 kg is the reference programme for the data entered in the energy label, in compliance with EEC 92/75 standards.

The consumption data shown on this chart is to be considered purely indicative, as it may vary depending on the quantity and type of laundry, on the inlet water temperature and on the ambient temperature.

Installation

Lifting the machine

Be careful when lifting the machine. Incorrect methods of lifting can cause physical injuries and also increase the risk of damage to the machine. Open the door and take hold of the top inside of the door opening. You can also lift the machine by gripping the rear overhang of the top.

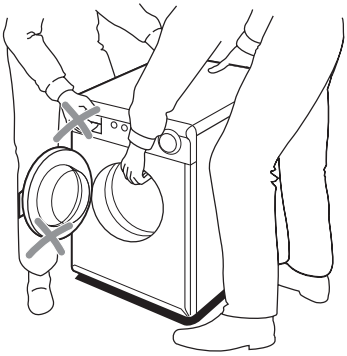

Warning! Never lift the machine by gripping it's control panel, door, or detergent dispenser.

Unpacking

When supplied the washing machine is packed using a number of locking devices/ packing pieces to prevent drum and motor from damage in transit All transit bolts and packing must be removed before using the appliance.
You are advised to keep all transit devices so that they can be refitted if the machine ever has to be transported again.

1. Spread some of the polystyrene packaging materials on the floor behind the machine and then lay the machine carefully rear side down on them. Make sure that no hoses are crushed in the process. Remove the polystyrene base from the bottom of the appliance.

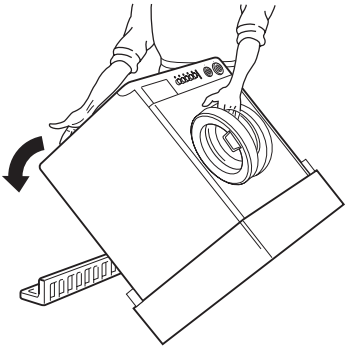

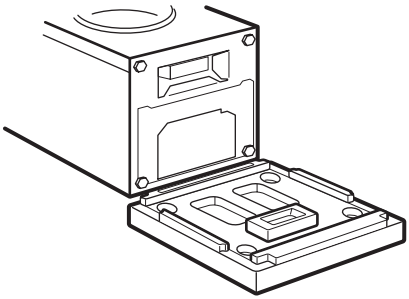

2. Return machine to it's upright position and remove the power supply cable and the draining and inlet hose from the hose holders on the rear of the appliance.

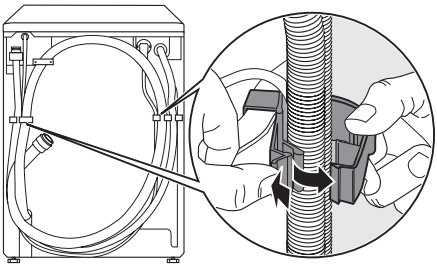

3. With a suitable spanner unscrew and remove the three screws and their spacers on machine's rear.

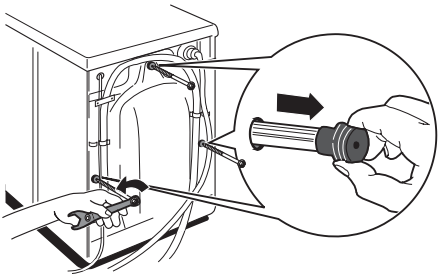

4. The three holes must then be plugged with the plastic plug caps supplied in the bag containing the instruction booklet, which can be found inside the drum.

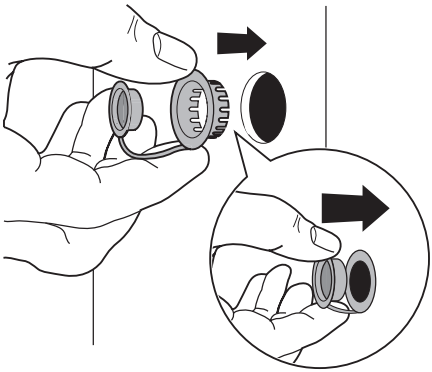

Positioning

Install the machine on a flat hard floor. Make sure that air circulation around the machine is not impeded by carpets, rugs etc. Check that the machine does not touch the wall or furniture. Level the washing machine by raising or lowering the two front feet. If necessary, check the setting with a spirit level. Any necessary adjustment can be made with a spanner. Accurate levelling prevents vibration, noise and displacement of the machine during operation.

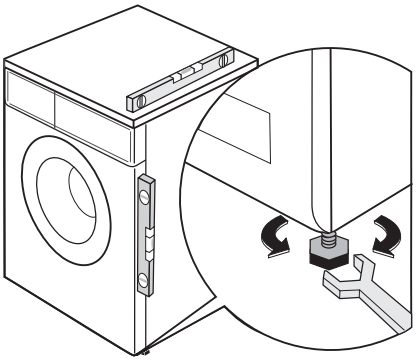

⚠ **Caution!** Never place cardboard, wood or similar materials under the machine to compensate for any unevenness in the floor.

Water inlet

⚠ **Warning! This appliance must be connected to a cold water supply.**

1. Connect the water inlet hose supplied with the machine to a tap with a 3/4" thread. Always use the hose supplied with the appliance.

Important! Do not use the hose from your previous machine to connect to the water supply.

2. The machine end of the inlet hose can be turned in any direction. Set the hose correctly by loosening the ring nut. After positioning the inlet hose, be sure to tighten the ring nut again to prevent leaks.

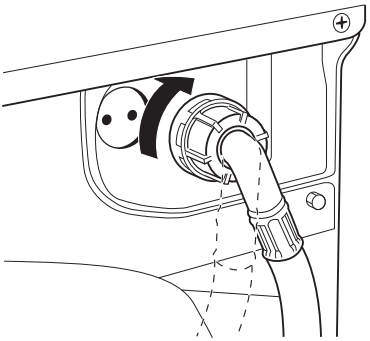

The inlet hose must not be lengthened. If it is too short and you do not wish to move the tap, you will have to purchase a new, longer hose specially designed for this type of use.

Important! Before connecting up the machine to new pipework or to pipework that has not been used for some time, run off a reasonable amount of water to flush out any debris that may have collected in the pipes.

Water drainage

The end of the drain hose can be positioned in three ways:

Hooked over the edge of a sink using the plastic hose guide supplied with the machine.

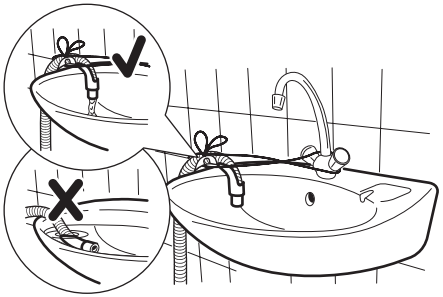

In this case, make sure the end cannot come unhooked when the machine is emptying. This could be done by tying it to the tap with a piece of string or attaching it to the wall.

In a sink drain pipe with a trap.

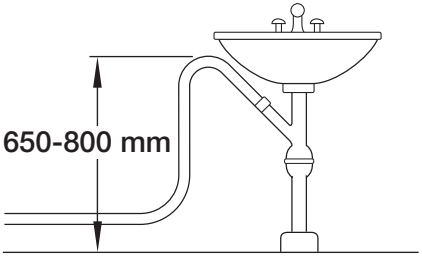

The drain hose can be connected directly into the pipe (e.g. beneath a washtub or sink), above the water trap. The drain hose must be arranged so that some part of it's length is routed up to a level corresponding to the top edge of the tub and fixed in place there.

Directly into a drain pipe at a height of not less than 65 cm and not more than 80 cm.
Their must be an air gap around and below the end of drain hose. This means that the internal diameter of the standpipe must be larger than the outer diameter of the hose.

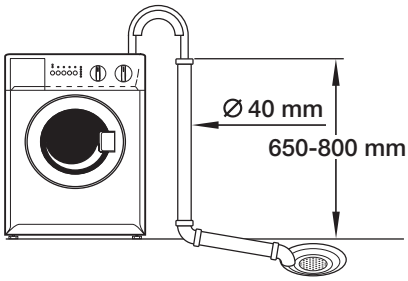

The hose must not be sticked into the standpipe more than 50 mm and it has to be fixed in this position. The drain hose must not be kinked.

The drain hose can be extended up to total 3,5 m. For the extension piece use a hose with an internal diameter at least as large as that of the machine's own hose. Use a suitable hose connector.

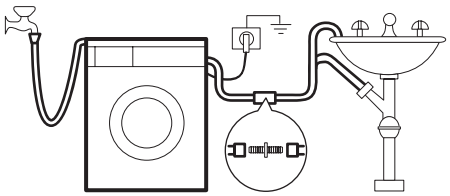

Information on the electrical connection is given on the rating plate on the inner edge of the appliance door.
Check that your domestic electrical installation can take the maximum load required, also taking into account any other appliances in use.

⚠ **Connect the machine to an earthed socket.**

⚠ **The manufacturer does not accept any responsibility for damage or injury through failure to comply with the above safety precaution.**

⚠ **The power supply cable must be easily accessible after installing the machine.**

⚠ **Should the appliance power supply cable need to be replaced, this must be carried out by a Service Centre.**

Environment concerns

The symbol ♻ on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical

and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council, your household waste disposal service or the shop where you purchased the product.

Packaging materials

The materials marked with the symbol ♺ are recyclable.
>PE<=polyethylene
>PS<=polystyrene
>PP<=polypropylene
This means that they can be recycled by disposing of them properly in appropriate collection containers.

Ecological hints

To save water, energy and to help protect the environment, we recommend that you follow these tips:

- Normally soiled laundry may be washed without prewashing in order to save detergent, water and time (the environment is protected too!).
- The machine works more economically if it is fully loaded.
- With adequate pre-treatment, stains and limited soiling can be removed; the laundry can then be washed at a lower temperature.
- Measure out detergent according to the water hardness, the degree of soiling and the quantity of laundry being washed.

Warranty

Electrolux

FOR SALES IN AUSTRALIA AND NEW ZEALAND
APPLIANCE: WASHING MACHINE
This document sets out the terms and conditions of the product warranties for Electrolux Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
   a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
   b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
   c) 'Appliance' means any Electrolux product purchased by you accompanied by this document;
   d) 'ASC' means Electrolux' authorised serviced centres;
   e) 'Electrolux' means Electrolux Home Products Pty Ltd of 163 O'Riordan Street, Mascot, NSW 2020, ABN 51 004 762 341 in respect of Appliances purchased in Australia and Electrolux (NZ) Limited of 3-5 Niall Burgess Road, Mount Wellington, in respect of Appliances purchased in New Zealand;
   f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Electrolux, at its discretion, to repair an Appliance during the Warranty Period;
   g) 'Warranty Period' means:
      – where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 24 months and in New Zealand for 24 months, following the date of original purchase of the Appliance;
      – where the Appliance is used for commercial purposes (including being used to directly assist a business or where the Appliance is used in a multi-family communal or share type environment), the Appliance will then be war-

ranted against manufacturing defects in Australia for 3 months and in New Zealand for 3 months, following the date of original purchase of the Appliance.

h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. This warranty only applies to Appliances purchased and used in Australia or New Zealand and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia or New Zealand.
3. During the Warranty Period Electrolux or its ASC will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Electrolux or its ASC may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Electrolux. This warranty does not apply to light globes, batteries, filters or similar perishable parts.
4. Parts and Appliances not supplied by Electrolux are not covered by this warranty.
5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Electrolux or its ASC. If you reside outside of the service area, you will bear the cost of:
   a) travel of an authorised representative;
   b) transportation and delivery of the Appliance to and from Electrolux or its ASC,

   In all instances, unless the Appliance is transported by Electrolux or an Electrolux authorised representative, the Appliance is transported at the owner's cost and risk while in transit to and from Electrolux or its ASC.
6. Proof of purchase is required before you can make a claim under this warranty.
7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Electrolux is not liable in the following situations (which are not exhaustive):
   a) the Appliance is damaged by:
      – accident
      – misuse or abuse, including failure to properly maintain or service
      – normal wear and tear
      – power surges, electrical storm damage or incorrect power supply
      – incomplete or improper installation
      – incorrect, improper or inappropriate operation
      – insect or vermin infestation
      – failure to comply with any additional instructions supplied with the Appliance;
   b) the Appliance is modified without authority from Electrolux in writing;
   c) the Appliance's serial number or warranty seal has been removed or defaced;
   d) the Appliance was serviced or repaired by anyone other than Electrolux, an authorised repairer or ASC.
8. This warranty, the contract to which it relates and the relationship between you and Electrolux are governed by the law applicable where the Appliance was purchased. Where the Appliance was purchased in New Zealand for business purposes the Consumer Guarantee Act does not apply.
9. To the extent permitted by law, Electrolux excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.
10. For Appliances and services provided by Electrolux in Australia, the Appliances come with a guarantee by Electrolux that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for

any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.

11. At all times during the Warranty Period, Electrolux shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.
12. For Appliances and services provided by Electrolux in New Zealand, the Appliances come with a guarantee by Electrolux pursuant to the provisions of the Consumer Guarantees Act, the Sale of Goods Act and the Fair Trading Act.
13. To enquire about claiming under this warranty, please follow these steps:
    a) carefully check the operating instructions, user manual and the terms of this warranty;
    b) have the model and serial number of the Appliance available;
    c) have the proof of purchase (eg an invoice) available;
    d) telephone the numbers shown below.
14. You accept that if you make a warranty claim, Electrolux and its ASC may exchange information in relation to you to enable Electrolux to meet its obligations under this warranty.

Important Notice

Before calling for service, please ensure that the steps listed in point 13 above have been followed.

FOR SERVICE or to find the address of your nearest state service centre in Australia **Please call 13 13 49** For the cost of a local call (Australia only)	**SERVICE AUSTRALIA** Electrolux **ELECTROLUX HOME PRODUCTS** www.electrolux.com.au	**FOR SPARE PARTS** or to find the address of your nearest state spare parts centre in Australia **Please call 13 13 50** For the cost of a local call (Australia only)
FOR SERVICE or to find the address of your nearest authorised service centre in New Zealand **Free call 0800 10 66 10** (New Zealand only)	**SERVICE NEW ZEALAND** Electrolux **ELECTROLUX HOME PRODUCTS** www.electrolux.co.nz	**FOR SPARE PARTS** or to find the address of your nearest state spare parts centre in New Zealand **Free call 0800 10 66 20** (New Zealand only)

Dometic GROUP

(D) Dometic WAECO International GmbH
Hollefeldstraße 63 · D-48282 Emsdetten
☞ +49 (0) 2572 879-195 · 🖷 +49 (0) 2572 879-322
Mail: info@waeco.de · Internet: www.waeco.de

Europe

(A) Dometic Austria GmbH
Neudorferstrasse 108
2353 Guntramsdorf
☞ +43 2236 908070
🖷 +43 2236 90807060
Mail: info@waeco.at

(CH) Dometic Switzerland AG
Riedackerstrasse 7a
CH-8153 Rümlang (Zürich)
☞ +41 44 8187171
🖷 +41 44 8187191
Mail: info@waeco.ch

(DK) Dometic Denmark A/S
Nordensvej 15, Taulov
DK-7000 Fredericia
☞ +45 75585966
🖷 +45 75586307
Mail: info@waeco.dk

(E) Dometic Spain S.L.
Avda. Sierra del Guadarrama, 16
E-28691 Villanueva de la Cañada
Madrid
☞ +34 902 111 042
🖷 +34 900 100 245
Mail: info@dometic.es

(F) Dometic S.N.C.
ZA du Pré de la Dame Jeanne
F-60128 Plailly
☞ +33 3 44633500
🖷 +33 3 44633518
Mail: info@waeco.fr

(FIN) Dometic Finland OY
Mestarintie 4
FIN-01730 Vantaa
☞ +358 20 7413220
🖷 +358 9 7593700
Mail: info@dometic.fi

(I) Dometic Italy S.p.A.
Via Virgilio, 3
I-47100 Forlì
☞ +39 0543 754901
🖷 +39 0543 756631
Mail: info@dometicwta.com

(N) Dometic Norway AS
Skolmar 24
N-3232 Sandefjord
☞ +47 33428450
🖷 +47 33428459
Mail: firmapost@waeco.no

(NL) Dometic Benelux B.V.
Ecustraat 3
NL-4879 NP Etten-Leur
☞ +31 76 5029000
🖷 +31 76 5029090
Mail: info@dometic.nl

(S) Dometic Scandinavia AB
Gustaf Melins gata 7
S-42131 Västra Frölunda
(Göteborg)
☞ +46 31 7341100
🖷 +46 31 7341101
Mail: info@waeco.se

(UK) Dometic UK Ltd.
Dometic House · The Brewery
Blandford St. Mary
Dorset DT11 9LS
☞ +44 844 626 0133
🖷 +44 844 626 0143
Mail: sales@waeco.co.uk

Overseas + Middle East

(AUS) WAECO Pacific Pty. Ltd.
1 John Duncan Court
Varsity Lakes QLD 4227
☞ +61 7 55076000
🖷 +61 7 55076001
Mail: sales@waeco.com.au

(HK) WAECO Impex Ltd.
Suites 3210-12 · 32/F · Tower 2
The Gateway · 25 Canton Road
Tsim Sha Tsui · Kowloon
Hong Kong
☞ +852 24632750
🖷 +852 24639067
Mail: info@waeco.com.hk

(ROC) WAECO Impex Ltd.
Taipei Office
2 FL-3 · No. 56 Tunhua South Rd, Sec 2
Taipei 106, Taiwan
☞ +886 2 27014090
🖷 +886 2 27060119
Mail: marketing@waeco.com.tw

(UAE) WAECO Middle East FZCO
R/A 8, SD 6
Jebel Ali, Dubai
☞ +971 4 8833858
🖷 +971 4 8833868
Mail: waeco@emirates.net.ae

www.waeco.com

192993262-A-272011